



## L.E.D. Wand Instructions

### **IMPORTANT!**

**YOUR INOVA MICROLIGHT HAS BEEN  
FACTORY SET IN SIGNAL MODE.**

**TO ACTIVATE YOUR MICROLIGHT  
FOR THE FIRST TIME:  
PRESS AND HOLD DOWN THE BUTTON  
FOR 15 SECONDS UNTIL THE LIGHT GOES OUT.**

#### **OPERATION GUIDE.**

Press the button one time for **high power**  
Press the button two times for **low power**  
Press the button three times for **strobe**

If you leave your Microlight on any setting for more than 2 seconds the next press of the button will turn it off and not go to the next function.

To reset your Microlight into **signal** mode: Press the button three times for strobe mode. While the light is strobing, press and hold the button for 5 seconds. In **signal** mode your light will only work as a squeeze light. To activate normal operating modes press and hold down the button for 15 seconds until the light goes out.

#### **BATTERY REPLACEMENT:**

Your **RED / GREEN / BLUE / WHITE** Microlight requires **two** 2016 lithium batteries.

